


SHAD

KAWASAKI Z650 RS '21 - K0ZR61SR

BCN

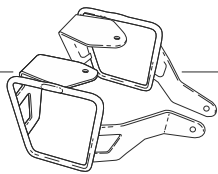

1 263064 x 1
263065 x 1



2 260596 x 2
Ø16 Ø9 x 20



3 303045 x 4
Ø8



4 303027 x 2
Ø8



5 304039 x 2
M8 x 40 DIN 7380



6 304028 x 2
M8 x 25 DIN 7380

WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

